


Table fan

Airbi BLADE

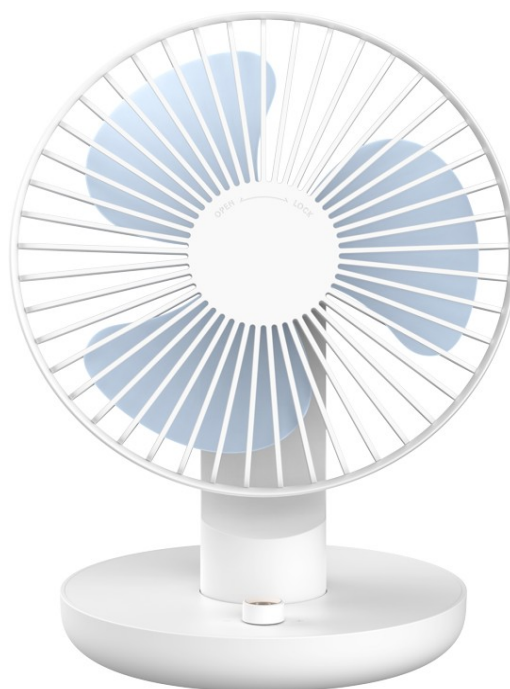

Instruction manual

(version 1.0)



Please read the instruction manual carefully before using this appliance!

Important safety instructions

Please read through the operating instructions carefully before you use the appliance for the first time and keep them safely for later reference. If necessary pass them on to the next owner.

1. The appliance is only to be used in the home for the purposes described in these instructions. Unauthorised use and technical modifications to the appliance can lead to danger to life and health.
2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
3. After unpacking, make sure that appliance wasn't damaged during transport. If you find any damage, contact your dealer as soon as possible. We recommend you keep the packaging for possible future use .
4. Before first use check that the device parameters (electric voltage, etc.) correspond to local conditions.
5. Use appliance in an environment of 10°C to 30°C. Do not use outdoors.
6. Do not place the appliance near a heat source. Do not subject the power cord to direct heat (such as a heated hotplate, open flames, hot iron sole plates or heaters for example).
7. Always place the device on a hard, level, horizontal surface and away from heat sources such as burners, radiators, etc. The device must not be operated on a surface that is not horizontal. Do not place the unit on a TV, audio equipment or other electrical devices.
8. Before using the unit, check that the AC adapter or power cord is not damaged. Do not use if the cable or adapter is damaged.
9. The device is not splash-proof.
10. Turn off the device and unplug the power cord before carrying out any maintenance on the device, cleaning it or after using it.
11. Prolonged use may cause damage to the product and shorten its life.
12. Keep the device in a dry place that is inaccessible to children (pack the device).
13. Do not use the device during a thunderstorm. The device contains metal elements, so a lightning strike may result in an accident.
14. Do not insert objects or drop objects into the internal part of the unit.
15. Do not cover the device during operation, it may overheat and the device may stop working.
16. The device must not be modified, all repairs must be carried out by an authorized person.
17. Battery life is affected by usage and environmental conditions.
18. The battery will last longer if stored in a charged state.
19. We recommend charging the device at least once a month if it is not used for an extended period of time. Otherwise it may degrade the life cycle of battery and performance of product.
20. Do not leave the device near a large magnetic field or where it could be affected by magnetic fields, as the battery may be discharged.
21. The manufacturer is not liable for damages caused by improper use of the device.

Instructions for charging

1. Do not use a voltage over rated voltage.
2. To prevent an accident, only use the charger that is purposely made for this appliance. Do not use with other chargers and do not use this appliance's charger on other items.
3. When product is fully charged or while it is not charging, ensure the charger is fully disconnected from product and unplugged from power source.

4. Do not drop or hit the charger. If the charger case is damaged for whatever reason, please contact the authorized service center for a replacement.
5. Do not touch the power cord with wet hands and do not pull directly on the cord.
6. Do not touch the appliance or the charger with wet hands. This can cause a short circuit or electric shock.
7. If the charger is exposed to rain, any water, or becomes excessively damped please stop using it and contact an authorized service center for replacement.

Operation instruction

Ensure the fan is fully charged prior to initial use or when it has not been used for a prolonged time. Place the fan on a flat surface in the desired location.

Charging

1. Connect the fan to a power source (such as a power bank or USB port in another electrical device) with a USB cable or to the included AC adapter and plug it into a power outlet. The charging LED will light up.
2. It takes about 4-5 hours to fully charge. While charging the device, it is normal that adapter warms up a bit.
3. When the charging LED goes out, the charging process is complete. If you use an adapter to charge, remove it from the wall outlet. Disconnect the USB cable from the unit.

How to use

1. Turn the control knob clockwise / counterclockwise to turn the appliance on / off.
2. Use the control knob to set the fan power (clockwise rotation increases power, counterclockwise power decreases).
3. The fan rotation function is switched on by pressing the control knob and switched off in the same way.

Product care and maintenance

Turn off the unit and unplug the power cord before carrying out any maintenance or cleaning work.

Caution: Never immerse the device in water (risk of short circuit). Use a damp cloth to clean the exterior and allow the unit to dry well.

Cleaning the fan propeller

- Hold the fan blade rear cover and rotate the front cover counter-clockwise until it can be released.
- Clean the fan blade with a damp cloth and allow to dry properly.
- After cleaning is complete, the protective front grille must be return to its origin position.

Defects and their solutions

- Repair of electrical devices may only be carried out by an authorized service center. If the device is tampered with outside the authorized service center, this will void the warranty and will not be covered by the warranty.
- Never use the appliance if the power cord or adapter is damaged, working irregularly, if the appliance has been dropped or damaged in any other way.
- Do not place any objects that do not belong in the machine.
- Product must not be disposed of with normal waste at the end of its useful life, but should be handed over to the applicable collection point for the recycling of electrical equipment.

Troubleshooting

Trouble	Solution
A slight noise from the fan while in use.	<ul style="list-style-type: none"> The fan is not noiseless. It uses a blade that makes certain sounds. This is not a malfunction.
It doesn't work.	<ul style="list-style-type: none"> The fan has not been turned on properly or the battery is low.
Sudden stop during work.	<ul style="list-style-type: none"> Accidentally turned the switch off. The battery is low.
Fan can operate too shortly for a single charge.	<ul style="list-style-type: none"> The operating time depends on the power setting of the device, the current capacity and the overall battery condition. If used improperly, battery life may decrease rapidly.

Technical specifications

Power supply (input): AC100-240V 50/60 Hz
 Power supply (output): DC 5V
 Rated power: 4 W
 Battery: 3,7V 3000 mAh

Noise level: 35-45 dB(A)
 Dimensions: 170 x 136 x 221 mm
 Weight: 436 g
 Complies with EU regulations: CE, EMC, WEEE

Disposal of the device (environment)

The European directive 2012 / 19 / CE on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



This product is in compliance with the essential requirements and other relevant provisions of EMC directive 2014/30/EU. The device was approved for use in EU countries, therefore, bear the CE. All necessary documentation is available at the importer address.

Changes in technical parameters, properties, printing errors in the instruction manual reserved.

Importer address:
 Bibetus s.r.o.
 Loosova 262/1
 Brno 638 00
 Czech republic
 E-mail: info@bibetus.cz