


# **Hand-held fan Airbi FAN TURBO**

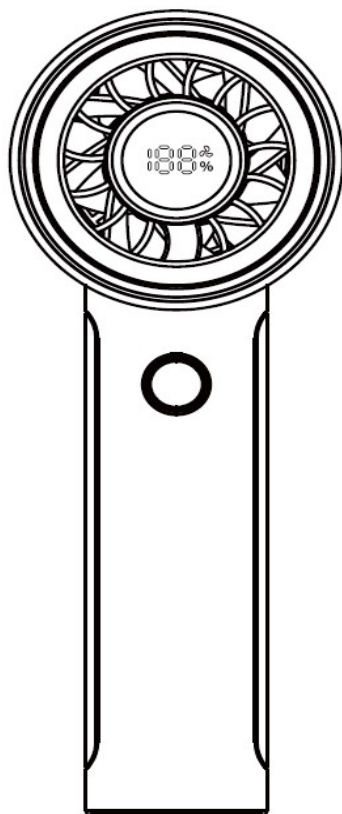

**Instruction manual  
(version 1.0)**



**Please read the instruction manual carefully before using this  
appliance!**

## Important safety instructions

---

Please read through the operating instructions carefully before you use the appliance for the first time and keep them safely for later reference. If necessary pass them on to the next owner.

- The appliance is only to be used in the home for the purposes described in these instructions. Unauthorised use and technical modifications to the appliance can lead to danger to life and health.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- After unpacking, make sure that appliance wasn't damaged during transport. If you find any damage, contact your dealer as soon as possible. We recommend you keep the packaging for possible future use .
- Before first use check that the device parameters (electric voltage, etc.) correspond to local conditions.
- **Batteries containing lithium carry a risk of explosion or fire if they are heated or mechanically damaged!**
- The battery and fan must not be thrown into a fire, short-circuited or disassembled. There is a risk of explosion!
- If the fan is hot during charging, this is a malfunction. Disconnect the device from the electricity immediately.
- The user cannot replace or remove the battery. Improper replacement of the battery leads to the risk of explosion.
- Do not place the appliance near a heat source. Do not subject the power cord to direct heat (such as a heated hotplate, open flames, hot iron sole plates or heaters for example).
- Place it away from heat sources such as burners, radiators, etc. Do not place the unit on a TV, audio equipment or other electrical devices.
- Before using the unit, check that the AC adapter or power cord is not damaged. Do not use if the cable or adapter is damaged.
- The device is not splash-proof. **Protect it from moisture!**
- Do not use in bathroom or swimming pool. When used outdoors, protect it from moisture.
- Turn off the device and unplug the power cord before carrying out any maintenance on the device, cleaning it or after using it.
- Prolonged use may cause damage to the product and shorten its life.
- Keep the device in a dry place that is inaccessible to children (pack the device).
- Do not use the device during a thunderstorm. The device contains metal elements, so a lightning strike may result in an accident.
- Do not insert objects or drop objects into the internal part of the unit.
- Do not cover the device during operation, it may overheat and the device may stop working.
- Switch off the appliance in the event of a malfunction or unusual behaviour (e.g. if the fan does not turn, is stuck or if a propeller or part of it has fallen off). The fan may indicate a fault by briefly flashing the power level.
- The device must not be modified, all repairs must be carried out by an authorized person.
- Battery life is affected by usage and environmental conditions.
- The battery will last longer if stored in a charged state.
- If the device is not used for an extended period of time, charge it fully. We recommend charging the battery at least once every 3 months. If the battery is discharged for a long time, the battery life and the endurance of the device may be reduced.
- Do not leave the device near a large magnetic field or where it could be affected by magnetic fields, as the battery may be discharged.
- The manufacturer is not liable for damages caused by improper use of the device.

## Instructions for charging

---


- Use a suitable USB power source, such as a power bank, computer or suitable mains adapter to power the device.
- Follow the voltage information on the device.
- If the device is fully charged or if it is not charging, make sure it is disconnected from the power supply.
- Do not touch the adapter cable with wet hands.

- Do not touch the device with wet hands, as electrical shock or short circuit may occur.
- If the fan, cable or power supply is exposed to rain or water or is in a very humid environment, stop using it immediately and contact an authorized service center.

## Operation instruction

---

Make sure the fan is fully charged before first use or if it was not in use for a long time. Charge the device for at least 2 hours before using it for the first time.

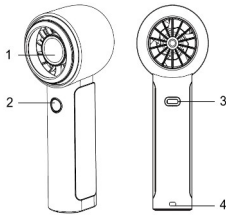

- 1: Display
- 2: Control button
- 3: USB-C power connector
- 4: Lanyard hole

## Charging

- Connect the device via USB cable to a power source (e.g. power bank, suitable adapter or USB port on another electrical device). The display will show the state of charge in percentages 0-100, the last digit will flash.
- A full charge takes about 4.5 hours.
- When the display shows 100%, the battery is fully charged.
- If the charge level is 10% or less, the digit on the display will flash. Please charge the device.
- Please try to keep the battery charge level between 20 and 80% for the longest possible battery lifespan.

## How to use

- Press the button. The fan will start rotating, "01" will appear on the display for about 4 seconds and then the battery level will be displayed.
- Press the button again. "25" will appear on the display for 4 seconds. The machine is now operating at 25% power. The battery charge status is then displayed.
- Press the button again to switch to 50, 75 and 100% power. When the button is pressed, these digits are always displayed for 4 seconds and then the battery charge percentage is displayed.
- Press the button again to switch off the fan. Nothing appears on the display now.
- You can switch off the fan at any power level by double-clicking the button.
- You can also adjust the fan power continuously by individual percentages. Press and hold the button. The power level will increase in increments of one percent and a rapidly increasing number will appear on the display. Release the button and the fan will operate at the set power.
- If the button is pressed and held while the fan is running at 100%, the power level will decrease in percentage steps.
- If the fan is charging, the power is limited to a maximum of 60%.

## Product care and maintenance

---

Turn off the unit and unplug the power cord before carrying out any maintenance or cleaning work.

Caution: Never immerse the device in water, do not shower it and keep it away from water and moisture (risk of short circuit). Use a damp cloth to clean the exterior and allow the unit to dry well.

## Defects and their solutions

---

- Repair of electrical devices may only be carried out by an authorized service center. If the device is tampered with outside the authorized service center, this will void the warranty and will not be covered by the warranty.
- Never use the appliance if the power cord or adapter is damaged, working irregularly, if the appliance has been dropped or damaged in any other way.
- Do not place any objects that do not belong in the machine.
- Product must not be disposed of with normal waste at the end of its useful life, but should be handed over to the applicable collection point for the recycling of electrical equipment.

## Troubleshooting

Trouble	Solution
A slight noise from the fan while in use.	<ul style="list-style-type: none"><li>• The fan is not noiseless. It uses a blade that makes certain sounds. This is not a malfunction.</li></ul>
It doesn't work.	<ul style="list-style-type: none"><li>• The fan has not been turned on properly or the battery is low.</li><li>• Press the control button or charge the device.</li></ul>
Sudden stop during work.	<ul style="list-style-type: none"><li>• Accidentally turned the switch off.</li><li>• The battery is low.</li></ul>
Fan can operate too shortly for a single charge.	<ul style="list-style-type: none"><li>• The operating time depends on the power setting of the device, the current capacity and the overall battery condition. If used improperly, battery life may decrease rapidly.</li></ul>
The device behaves strangely and the fan speed flashes on the display for 3 seconds.	<ul style="list-style-type: none"><li>• This is probably a malfunction in the device. Please switch it off and contact an authorised service centre.</li></ul>

## Technical specifications

Battery life: 2.5-8 hours (depends on fan speed)  
Power supply: DC 5V 1000 mA ( $\pm 20\%$ )  
Battery: Li-Ion 3.7V 3000 mAh 11.1 Wh  
Cable: USB-A to USB-C

Dimensions: 59 x 63 x 159 mm  
Weight: 202 g  
Complies with EU regulations: CE, RoHS, WEEE

## Disposal of the device (environment)

The European directive 2012/19/CE on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



This product is in compliance with the essential requirements and other relevant provisions of EMC directive 2014/30/EU. The device was approved for use in EU countries, therefore, bear the CE. All necessary documentation is available at the importer address.

Changes in technical parameters, properties, printing errors in the instruction manual reserved.

Importer address:  
Bibetus s.r.o.  
Loosova 262/1  
Brno 638 00  
Czech republic  
E-mail: [info@bibetus.cz](mailto:info@bibetus.cz)