Cordless body massager Airbi FIT



Instruction manual

(version 1.0)

CE

Please read the instruction manual carefully before using this appliance!

Important safety instructions

Please read through the operating instructions carefully before you use the appliance for the first time and keep them safely for later reference. If necessary pass them on to the next owner.

- 1. The appliance is only to be used in the home for the purposes described in these instructions. Unauthorised use and technical modifications to the appliance can lead to danger to life and health.
- 2. This appliance can be used by children aged from 10 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 3. Not recommended for use by pregnant women and diabetics.
- 4. In the following cases the use of this appliance should be stopped immediately:
 - damaged power cord
 - appliance is not operating properly
 - $^{\circ}$ appliance is dropped with force on the ground and is cracked or damaged
 - appliance has been submerged in water
- 4. Do not stand or sit on this appliance. This appliance is not stable enough to hold a human body and may cause a fall accident.
- 5. Do not use the appliance for long periods of time. This appliance should be used at short intervals and given the proper amount of time to cool before restarting.
- 6. Do not use the appliance in a damp or humid environment such as the bathroom or near a pool. Exposure to water may cause the appliance to short circuit.
- 7. Do not use the appliance in direct sunlight or near an open flame. Excessive exposure to heat may cause the product to overheat and explode.
- 8. Do not use the appliance during a storm where lightning strikes are present. This appliance does contain metal parts that should not be exposed during storm.
- 9. Do not insert or allow any items/objects to fall into internal part of the product.
- 10. Do not cover the massager with anything while using, this could lead to motor overheating and appliance will stop working.
- 11. In order to avoid appliance failure, do not disassemble the internal components without permission.
- 12. Battery life varies by application and/or operating conditions.
- 13. Batteries will last longer if kept recharged versus a discharged state.
- 14. If the product is not in use for extended duration, charge the unit once every month. If the batteries remain discharged too long, this may degrade the life cycle and performance of product.
- 15. Do not keep product near a high magnetic field or where it can be affected by a magnetic field, for it can cause batteries to discharge.

Instructions for charging

- 1. Do not use a voltage over rated voltage.
- 2. To prevent an accident, only use the charger that is purposely made for this appliance. Do not use with other chargers and do not use this appliance's charger on other items.
- 3. When product is fully charged or while it is not charging, ensure the charger is fully disconnected from product and unplugged from power source.
- 4. Do not drop or hit the charger. If the charger case is damaged for whatever reason, please

contact the authorized service center for a replacement.

- 5. Do not touch the power cord with wet hands and do not pull directly on the cord.
- 6. Do not touch the appliance or the charger with wet hands. This can cause a short circuit or electric shock.
- 7. If the charger is exposed to rain, any water, or becomes excessively damped please stop using it and contact an authorized service center for replacement.

Operation instruction

 
Ensure massager is fully charged prior to initial use or when it has not been used for a prolonged time.

Charging

- 1. While appliance is in off mode, insert the charging plug into the charging jack.
- 2. It takes about 3 hours for appliance to be fully charge. When fully charged, the charger indicator light will have changed from red to green. While charging, it is normal for the charger to get a little hot.
- 3. Once indicator light has turned green to indicate fully charged, you must remove the charger and power pluc from appliance. The massager will not work while it is charging.

How to use

- 1. Press " ⁽⁾ " button to turn the massager and red indicator function on or off.
- 2. Press " « " button to use the auto massage mode. There are a total of six massage modes to choose from.
- 3. Press " III" button to increase or decrease the massage intensity level. There are a total of six intensity levels to choose from.
- 4. The massager will automatically turn off after 15 minutes.
- 5. After use, you must turn off the appliance by pressing off button.



Warm reminder

- 1. When the battery power display shows low battery, please charge it in time.
- 2. Every time you press the function button, the built-in buzzer of the appliance will issue a "Di", to show the success of the operation.
- 3. Recommended time for usage is 15 minutes.

Troubleshooting

Trouble	Solution
A slight noise from the motor while in use	This is sound generated by the mechanical structure configuration. This is not a malfunction.
Motor does not turn	Not switched on properly or the battery is low.

Sudden stop working during massage	Accidentally turned the switch off.Product has 15 minute automatic security stop
	feature, time limit has been reached.The battery is low.
	• The ballery is low.

Product care and maintenance

- 1. Place the massager in a safe, cool and dry place when not in use.
- 2. Always unplug massager prior to cleaning.
- 3. After use, wipe massager with a soft, damp cloth using non-abrasive cleaners. If necessary clean with a sterilizer.
- 4. Do not submerge cordless massager in water or any other liquid.
- 5. Keep away from all solvents and harsh detergents.
- 6. Do not attempt to repair this massager. There are no user-serviceable parts.
- 7. Do not dispose appliance in a landfill. Appliance contains a Li-ion battery and other electrical components which is considered hazardous waste.

Technical specifiations

Disposal of the device (environment)

The European directive 2012 / 19 / CE on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

This product is in compliance with the essential requirements and other relevant provisions of EMC directive 2014/30/EU. The device was approved for use in EU countries, therefore, bear the CE. All necessary documentation is available at the importer address.

Changes in technical parameters, properties, printing errors in the instruction manual reserved.

Importer address: Bibetus s.r.o. Loosova 262/1 Brno 638 00 Czech republic E-mail: info@bibetus.cz Tel: +420-544214627