

Tower fan

Airbi ZEPHYR



Instruction manual

(version 1.0)



Please read the instruction manual carefully before using this appliance!

Important safety instructions

Please read through the operating instructions carefully before you use the appliance for the first time and keep them safely for later reference. If necessary pass them on to the next owner.

- The appliance is only to be used in the home for the purposes described in these instructions. Unauthorised use and technical modifications to the appliance can lead to danger to life and health.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- After unpacking, make sure that appliance wasn't damaged during transport. If you find any damage, contact your dealer as soon as possible. We recommend you keep the packaging for possible future use .
- Before first use check that the device parameters (electric voltage, etc.) correspond to local conditions.
- Use appliance in an environment of 10°C to 30°C. Do not use outdoors.
- Please put appliance more than 1 meter away from TV or radio. It is recommended to put appliance on a flat ground in the room.
- Do not place the appliance near a heat source. Do not subject the power cord to direct heat (such as a heated hotplate, open flames, hot iron sole plates or heaters for example). Protect power cords from oil.
- Always put the appliance on a hard, flat horizontal surface. There should be a gap of at least 20 cm at both sides and back of the product, while 30 cm from top surface.
- Do not place anything on the appliance and do not block the air inlet and outlet.
- Before using the appliance, check if AC adapter or power cord is

- not damaged. Do not use it if the cord is damaged.
- If the power cord is damaged, it must be replaced by the manufacturer or a repair shop authorized by the manufacturer or by similarly qualified persons in order to avoid a hazard
 - Switch off and unplug the unit before any manipulation such as cleaning of filters maintenance.
 - Do not lift or move the appliance when it is working.
 - Do not touch the power cord with wet hands, may cause electric shock.
 - Do not insert fingers or metal objects into the air outlet gap, may cause electric shock.
 - Do not let water, flammable detergent or other liquid get into the product, may cause electric shock of fire.
 - This product is not supposed to be used as daily air cleaner, air conditioner or cooker hood.
 - Do not place appliance in too humid or too hot places.
 - Do not use the appliance in aromatherapy scent insecticide environment.
 - Store the appliance in a dry place inaccessible to children (pack the appliance).
 - Manufacturer is not responsible for any damage due to improper use of appliance.


Packing list

- fan
- stand
- remote control
- user manual

Features

- 2 different air outlet directions
- oscillation function
- 4 operating modes - normal, night, natural and ECO
- 3 fan speeds - low, medium and high
- timer - 1, 2, 4 and 8 hours
- LED display with automatic dimming function
- remote control

Product's scheme

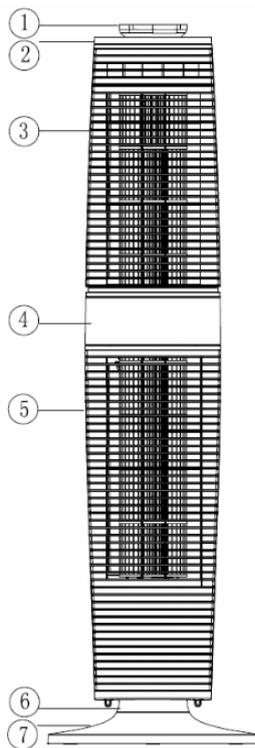


1. Handle
2. Top cover
3. Upper housing
4. Control panel
5. Bottom housing
6. Oscillation base
7. Stand

Control panel/remote control:



8. ON/OFF button

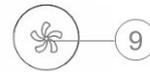

9. FAN SPEED button



10. TIMER button



11. MODE button



12. OSCILLATION button

Display



Installation

- Take out the fan for assembly and make sure all accessories are included
- Please assemble the fan as below instructions:
 1. Lock rear base and front base together according to Figure 1.
 2. Put the main body into the assembled base along

the locating pole, according to Figure 2.

3. After assembled, put the machine in a suitable place, plug in and operate according to the instruction manual.

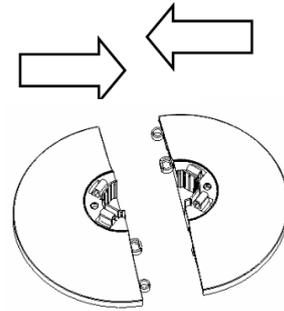


Figure 1

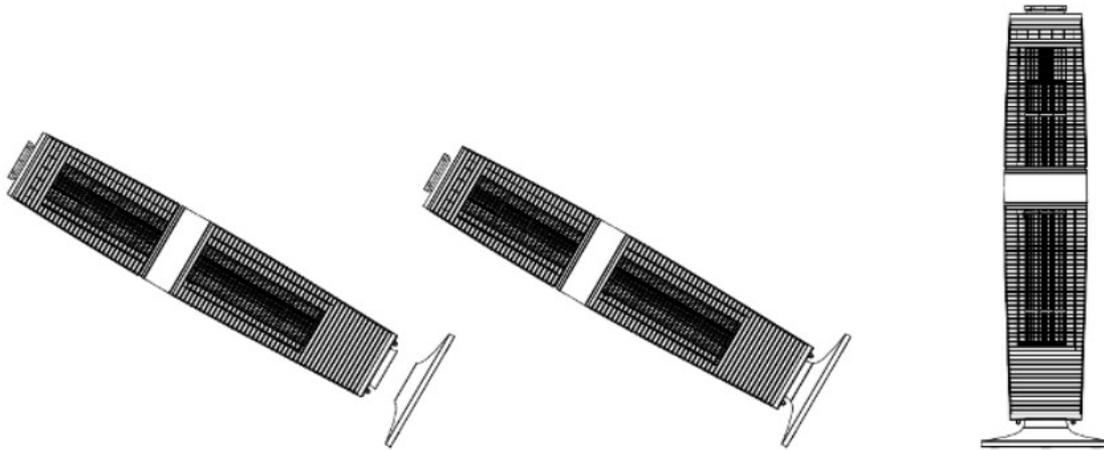


Figure 2

Operation instructions

When plugging in the first time you will hear 2 beeping sounds. This means the fan is correctly connected. When the unit is on standby status, only the ON/OFF will be available. (Two beeps when unit is plugged in, one beep when buttons are pressed and one beep for power off)

ON/OFF button

Start the fan operation by pressing the “ON/OFF” button on the control panel. The fan works initially in “LOW” speed, normal mode, no timer and no oscillation setting. To turn off the fan, press the “ON/OFF” button and the unit will shift to stand by mode with one beep sound.




FAN SPEED button

- Press FAN SPEED button to set wind speed, and circulate as the rule of LOW - MED - HI - LOW. LED lights show accordingly.



OSCILLATION button

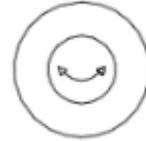


- By pressing this button you can switch on/off oscillation function
- The setting (except timer and mode) is memorized even the unit is turned off (not power off).

Remote control – battery change

WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN

Remote control has a battery compartment that requires two or more independent and simultaneous actions to remove its cover; press and pull out the battery compartment on the back of remote control, install the button cell (CR2032 3V) according to the positive and negative sign and close the compartment. Align the remote control with the receiver on the fan to operate

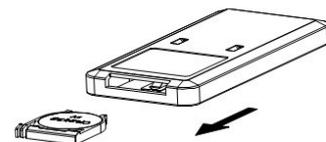

Maintenance

If there is too much dust or dirt on the front grid cover and wind wheel of the fan, the performance of air-out would be affected, so we suggest clean the fan once per month at least.

1. Always remember unplug the fan before cleaning, or may cause electric shock or product damage.
2. Clean with ordinary cleaner and banister brush. Do not use any chemical agents.

Unit surface cleaning

1. Do not allow water and steam to drip on.
2. Do not use corrosive detergent or solvent cleaning.
3. Always unplug the fan before cleaning.

Maintain guidance

1. Unplugged and packed to prevent dust from entering the body if not use for a long time.
2. Placed in a dry well ventilated place after packed.

Troubleshooting

Trouble	Solution
Can not turn on or button has no response	<ul style="list-style-type: none"> • Check the power cord if is plugged in.
Strange sound or smell during operation.	<ul style="list-style-type: none"> • Switch off appliance and check if there is any blocking object inside fan.

Technical specification

Rated voltage	220-240 V, 50 Hz
Power	45 W
Noise	< 55 dB (A)
Air flow	500 m ³ /h
Dimensions	280 x 280 x 968 mm
Weight	4,8 kg

Disposal of the device (environment)

The European directive 2012 / 19 / EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



This product is in compliance with the essential requirements and other relevant provisions of EMC directive 2014/30/EU. The device was approved for use in EU countries, therefore, bear the CE. All necessary documentation is available at the importer address.

Changes in technical parameters, properties, printing errors in the instruction manual reserved.

Importer address:
 Bibetus s.r.o.
 Loosova 262/1
 Brno 638 00
 Czech republic
 E-mail: info@bibetus.cz
 Tel: +420-544214627